


Crate QR Tag Fitting

QR tags must be fitted to the correct crates with crate number which displays on app matching the original manufacture's plaque. QR tags should be fitted to the driver's side front of the crate, just behind the cab, or equivalent for trailer crates. Please see diagram below:

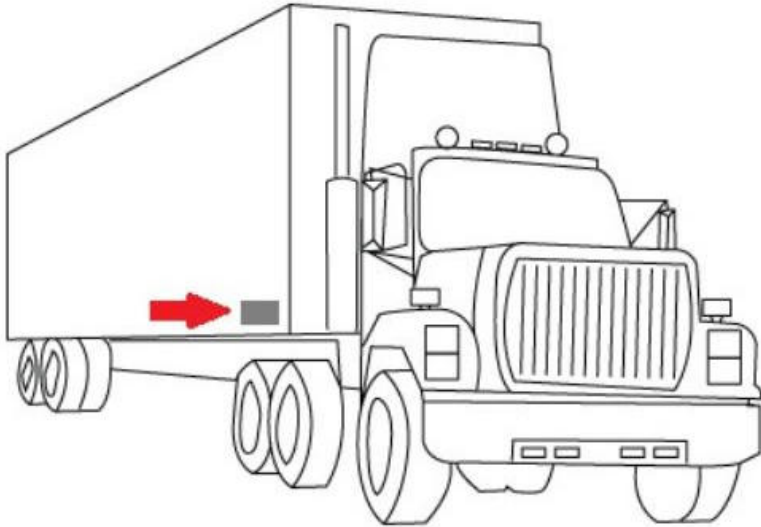

The preferred method of fixing is with 4x pop rivets. Keep in mind when choosing your method of tag fixing that lost QR tags will incur a fee for replacement.